



Anxin Science & Technology CO.,LTD

LCD LIFT USER MANUAL

MODEL:

DJ0066-19

DJ0066-22

DJ0066-24

SAFETY AND CORRECTIVE MAINTENACE

SAFETY PRECAUTIONS AND MAINTAIN



WARNING:

Use the control beyond the regulation of this file, the adjustment or procedure can lead to the fact shock by electricity get an electric shock or machinery dangerous.

DO AS FOLLOWING OPERATION:

- ✧ To prevent direct sunlight, fire and other heat objects.
- ✧ Take away everything which is possible fall into the lift or obstruct cooling electrical components normal cool.
- ✧ Make sure power and socket is normal when you install lift.
- ✧ There will be 6 seconds wake time when you close it abnormally.
- ✧ You must use cables accepted by ANXIN. If lost, contact with us.
- ✧ To prevent heavily shock and impact.
- ✧ Do not make it fall down or knock it when it is transferring.

MAINTAIN:

- ✧ Take your hand away from the opening when it is moving. Do not press the LCD panel and catch the frame to move it.
- ✧ Cut down the power supply for a long time non-use.
- ✧ Using humidity fabric to clean it and cut down the power supply then you can use dry fabric.
- ✧ Forbid putting the lift into bad conditions, such as dusty, rain and near by water etc.
- ✧ The lift should keep dry.
- ✧ If water or other things fall into the lift, cut off the power supply and take out the power line as soon as possible. At the same time take it to maintain center.
- ✧ Far away from hot, cold place and do not put it under sun light.
- ✧ For keeping best condition, you had better fits following condition:

Temperature: 5~40℃ 41~104F

Moistures: 20~80% RH

If there has any abnormal performance, please contact with after sales service man.

MAINTAINANCE:

- ✧ Only professional workman can open the lift.
- ✧ Keep away from water and sunlight.
- ✧ Make sure there has packing when transfer.



If there has any abnormal performance, please contact with after sales service man.

ABOUT BROCHURE

This brochure fits for all our LCD lift.

- Safety and maintain: Provide all details for solving technical support.
- Offer summarize of this brochure, including logo and other content.
- Product specification: Central description about LCD lift.
- Installation: General description about how to install and operate.
- Warranty: Warranty conditions.

ABOUT LOGO



NOTE: Signs importance information to help you operate the lift.



NOTICE: Notify something forbidden.



CAREFUL: May be hurt our body and tell you how to avoid.




PRODUCT INTRODUCTION:

Features

- ✧ Precise structure:
 - ✓ Working with straight Bearing and Track; Japanese electrical machine, lower noise and stability.
 - ✓ Panel and other driving structure made by Aluminum Alloy mould. By electric oxide and drew bench. Light weight and simple structure.
 - ✧ Best design:
 - ✓ Without plumbum;
 - ✓ Power cost lower than average cost.
 - ✓ Self-check and self-repair.
 - ✧ Excellent function:
 - ✓ With RF mould, high anti-jamming design and with out mass cables in the desk.
 - ✓ Three control ways: signal control, remote control and centre control.
-


FUNCTION INTRODUCTION:

Input:

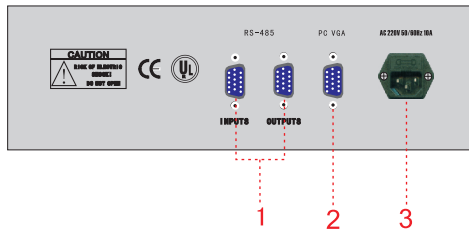


1. RS485 socket
2. 15-pin VGA
3. Voltage: 220V Insurance 3.15A

Panel button:

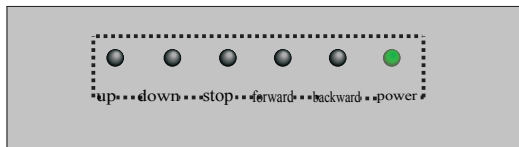

15-pin VGA

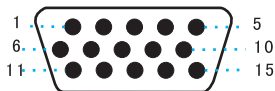

NO.	INTERFACE	NO.	INTERFACE
1	Red video input	9	+5V
2	Green video input	10	Logic ground line
3	Blue video input	11	Ground line
4	Sense (GND)	12	Serial Data Asset (SDA)
5	Plug and Play detection	13	Level and Vertical
6	Red ground video input	14	VCLK for DDC
7	Green ground video input	15	SCL
8	Blue ground video input		

OPERATE INTRODUCTION

Operation:

After connect all lines and open power supply then you can operate the lift.

Control ways: panel button control.

Control ways:

- Single control: each has a remote collector.
- Wireless control: most 6 group and controlled by remote-control handle.
- RS485 central control: Serial Port (Mostly 15 group).



Power indicator light

Note:

All remote controllers has English introduction; when the light is dark, please change battery.

Clean old code:

- Push up and stop button at the same time and the blue light will flicker slowly. When it flicker quickly, but out your finger.
- Push up and stop button again at the same time, if blue light do not flicker, it means old code had been cleared.

Login remote controller:

- **All the group control:** After clear the code, when indicator light on the remote controller is not shine, you can reset the control data.
- **Group logo in:** Firstly press grouping button to choose the group; which one is bright it means which group been chosen. Press up and stop button, blue light will flicker slowly, then loosen you finger. Then press study button, indicator light will be lighten it means success.
- **Separate group control:** After success logo in, you can control the group.

SPECIFICATION

connecting port	15-pin VGA
control ways	panel control, remote control, RS485
speed	up: 35s; down: 32s
max capacity	9KG - 12KG
pitching angle	forward: 0 degree; backward: 15 degree
noise	lower 30DB
electric power	18W
power	220VAC 50/60HZ
power consumption	28W
humidity	5 degree- 40 degree(working)
relative humidity	20%- 80%

MODEL		DJ0066-19	DJ0066-22	DJ0066-24		
LCD size		19"	22"	24"		
product size (L*W*H)mm		550*152*670	630*152*710	670*152*710		
packing size (L*W*H)mm		680*300*800	750*300*850	800*300*850		
cutting size (L*W)mm		541*143	621*143	661*143		
N.W KG		26	27	28		
G.W KG		29	33	34		

INSTALLATION INFORMATION:

INSTALLATION STEPS

INSTALLATION GUIDELINE

 
TROUBLE SHOOTING

AFTER-SALES SERVICE

INSTALLATION STEPS:

- Make sure the accurate size and position of LCD lift. Open a hole to fit the LCD lift.
- Running the LCD lift before installation and cut off VGA line.
- Carefully put lift into the container and connect all connect line.

INSTALLATION GUIDELINE:

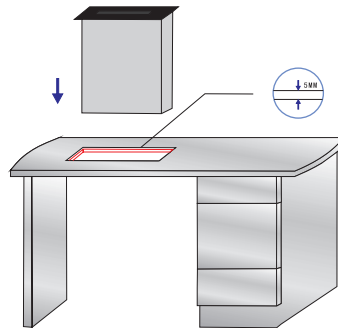

Installation Diagram

TROUBLE SHOOTING:

When there has any abnormal condition about the lift please contact with manufacture. With permission of manufacture you could open it yourself.

Without working:

- Checking the power supply, make sure everything is all right.
- Checking electric fuse and the up and down button.

Does not working but can hearing weak noise:

- Make sure whether it is short circuit and bad line connecting. If electronic power becomes hot, you should cut down the power.

Working alright, but has a loud noise:

- Checking whether something is in the belt or gear;
- Whether straight bearing loosening and distortion;
- Checking whether something is in the straight bearing or guide rail;
- Checking the screw of the body.

AFTER-SALES SERVICE

- All our LCD Monitor Lifts are high standard designed and produced. It is easy to be installed and using. If you have any problem when you are installing, please contact us.

SERVICE:

Thanks for using our LCD Monitor Lift

- If the lift abnormal working with intact panel, you can exchange another one but if the surface have broken more than 6 month, we can repair free for 12 month.
- WARRANTY TIME: ONE YEAR

WARRANTY CONTENT:

Terms of warranty service: A. With invoice and receipt;
B. There must contain buying date and sellers name and products type and specifications.

The following will not enjoy free service:

- A. Warranty bill had been altered or can not be recognized.
- B. Others without permit had opened or repaired the lift.
- C. Broken by accident including water, fire, lighting and or improperly operate.
- D. Other signal and electrical line courses reception problem.
- E. Using equipment improperly.

ANY PROBLEM YOU ONLY NEED PICK UP PHONE OR USE YOU MOUSE:

WEB: www.bjanxin.cn