



# A Mounting features M profil

Assembly profile mounting holes

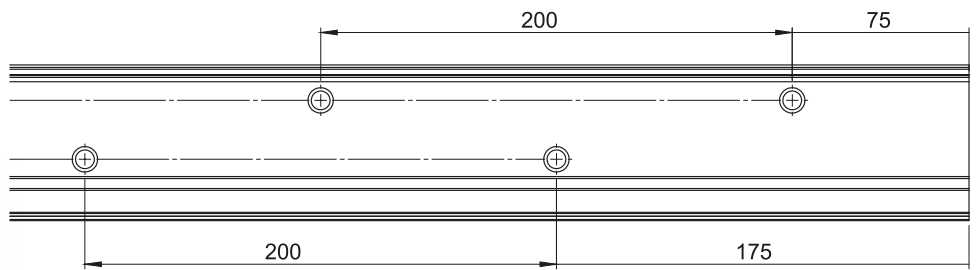


Profile dimensions

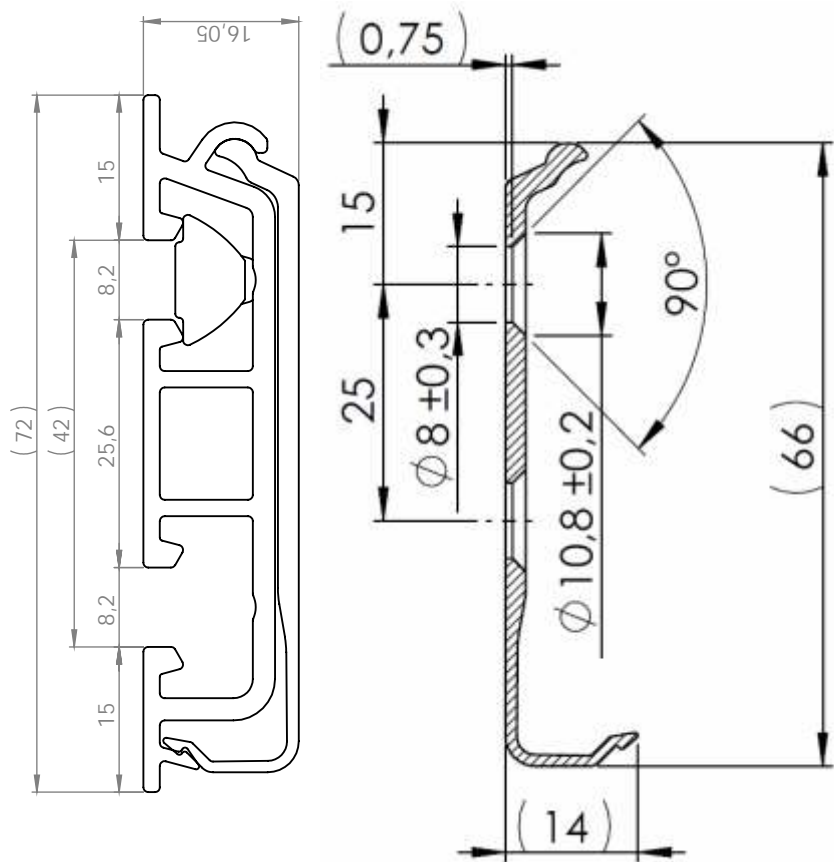

Calculate 10 screws per meter profile


Type of screw to be used

Skriv typ TFX-S FZP  
 $\phi_{d1}$  5 mm  
 $\phi_{d2}$  10 mm




Length > 20 mm

**CRITICAL** screw positioning

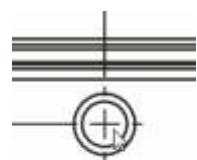


In center

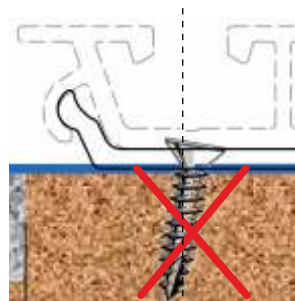


Axial correct

This aspect is VERY important


# 1 (2) Mounting Instructions EXTERNAL

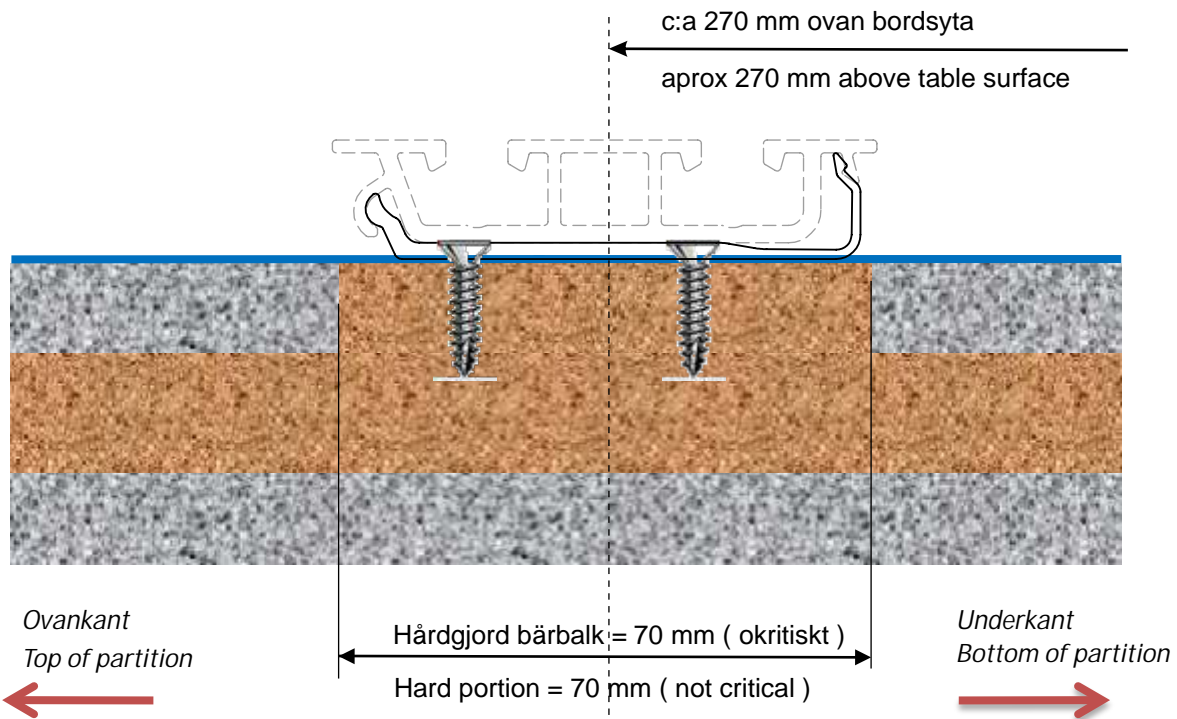

# 2 (2) Mounting Instructions INTERNAL

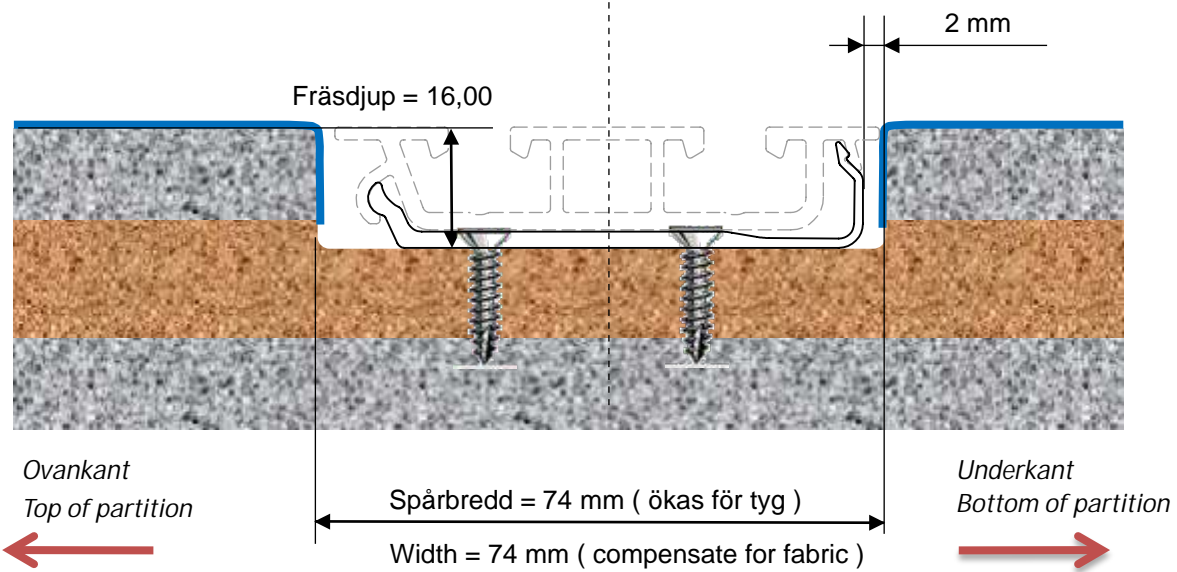

### Critical! Screws / positioning

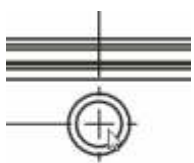

In center




Axial correct

10 / m

Skruv typ TFX-S FZP

Ø d1 5 mm  
Ø d2 10 mm



### Assembly

